

INSTRUCTIONS | WARRANTY | WATCH CARE



THANK YOU for purchasing a ProTek timepiece!

 
ProTek is an American watch brand. As a no-nonsense, no-compromises brand, it was created for those that serve and protect us, including fire-fighters, law enforcement, military and first responders. Protek watches are also ideal daily-wear watches and perfect for consumers with active lifestyles and who enjoy the great outdoors. Manufacturing is done in clean-room conditions with high quality components.

Please read and follow the watch care instructions carefully to ensure that you have many years of problem-free wear and love having a ProTek on your wrist.




TIME MODELS

- Pull crown out to 1st position.
- Turn crown to set hour & minute hands.
- Push crown back to 1st position, If watch has a screw down crown, make sure it is screwed down securely after setting. Seconds will run when crown is in normal position.



TIME & DATE MODELS DATE

 - Pull the crown out to the 1st position (for watches with screw downcrowns, unscrew crown first).
- Turn crown either clockwise or counter-clockwise to set the date for the previous day's date. The direction that moves the date varies on different watch models. (If the watch is set between the hours of approx 9:00pm to 1:00 am, the date may not change the following day. Change the time setting to a time outside of this interval before changing and setting the date).



TIME

- Pull crown out to the 2nd position.
- Turn Clockwise to advance the time the time until the date changes to the current date. This is 12:00 midnight in AM mode.
- Set watch to the correct time. To set a PM time, advance time a full rotation (past 12:00 a second time) and then set time. This will ensure that the date changes at Midnight instead of noon.
- Push crown back to normal position. If watch has a screw down crown, make sure it is screwed down securely after setting.

ROTATING BEZEL

If your ProTek watch has a uni-directional rotating bezel, it can be used to track elapsed time. Rotate the bezel counter clockwise until the zero is aligned with the minute hand of the watch. As the minute hand moves, you can track elapsed time by reading the markings on the bezel.

WATCH CARE & MAINTENANCE

- Do not expose your ProTek watch to extreme temperature changes such as entering a hot shower, sauna, Jacuzzi or hot tub. The combination of extreme heat and water may cause your watch to lose some water resistancy. During sudden temperature variations, condensation may appear underneath the crystal. This light fogging should dissipate on its own and will not affect the operation of the watch. If this condensation does not dissipate on its own, your watch should be evaluated and undergo pressure testing by a certified watch technician at an authorized service center.
- Avoid severe impacts or drops onto hard surfaces. These can break the crystal and affect the water resistancy and watch performance. Cracked, chipped or loose crystals should be replaced immediately.
- Dead or low batteries left in a watch can leak and damage the watch's movement. Be sure to have a dead battery replaced promptly.

- Water resistancy is attained using rubber or plastic seals (gaskets) that
 will deteriorate under normal conditions and reduce the water resistancy
 of your watch. These seals should be checked by a certified technician
 at least every two years to ensure the rated water resistancy. If you dive
 frequently, it is suggested to pressure test the watch annually.
 If your watch has a "screw-down" locking crown, be sure it is screwed in all
- If your watch has a "screw-down" locking crown, be sure it is screwed in all
 the way and locked before entering the water. Push-in crowns should be in
 their original closed position (pushed in all the way) before water exposure.
 Do not pull out the crown or operate the pushers under water.
- Rinse watch with mild soap and fresh water after exposure to salt water or sand. This is especially important if your watch has a rotating bezel. Wipe dry with a soft cloth and store in a dry place. Do not clean with or expose your watch to strong chemicals, aerosol sprays, soaps or solvents as it may discolor, damage, dry out or deteriorate elements of the watch.
- Do not wear leather straps in the water unless the leather is treated for use in water.

WATER RESISTANCE

Your ProTek watch is designed to withstand certain pressures of water resistance and each model is rated for water resistance to a certain depth and water activity. The Meter depth rating is not how deep the watch can go underwater – it is a measure of pressure. (See Water Resistance Rating Chart)

If your watch is equipped with a screw-down crown, it must be screwed in to the locked position prior to any exposure to water. Using your watch in water with the crown unscrewed or partially screwed down will result in leakage and damage. Please ensure that after setting your watch or manipulating the crown, that the crown is completely screwed down tight.

Your ProTek watch should be rinsed thoroughly after use in salt water.

WATER RESISTANCE RATING

	30M (3ATM)	Not Suitable for water submersion
	50M (5 ATM)	Splash Resistant – not suitable for water submersion
	100 M (10ATM)	Suitable for surface water sports such as snorkeling & swimming
	200 M (20 ATM)	Suitable for recreational water sports such as surfing, snorkeling, swimming, water skiing and scuba diving to normal depths*
	300 M (30 ATM)	Suitable for water sports and scuba diving to deeper depths*
	1 11111/	

[•] It is recommended that your ProTek watch not be used as the primary timing device for scuba diving.

ProTek watches employ the ultimate self-powered illumination system that enables them to glow continuously for 25 years, allowing for time-at-aglance in any light condition, including complete darkness. This unparalleled ProGlo illumination technology comes from the world leader in luminous compounds located in Switzerland. Unlike the conventional methods found in most watches that require the lume to be "charged" by exposure to an external light source, ProGlo requires no light to "charge" the lume - it simply glows on its own.



not proof of purchase).

ProTek timepieces come with a two (2) year limited warranty covering defects in materials and workmanship existing at the time of original purchase from an authorized ProTek dealer. The warranty does not cover normal wear and tear, batteries, crystal, strap, bracelet, loss, theft, misuse or abuse. If the ProTek model is discontinued and no longer manufactured, parts may no longer be available to repair your watch. If you are unsure, please contact Time Concepts: info@timeconcepts.net Under this warranty, if the watch proves to be defective, Time Concepts, LLC will (at their option) make any necessary repairs or replace the watch, Items not covered by the warranty will be the financial responsibility of the consumer. Proof of purchase and/or the original sales receipt is needed to validate the warranty (this warranty booklet is

Do not attempt to repair the watch gourself. You will void the warranty if you open the ceseback, push the buttons underwater or neglect to push in or screw down the crown (depending on type of crown) into its locked position before exposing the watch to moisture or submerging it in water. Repairs and battery replacement should be performed by a certified jeweler or watch technician. This will help prevent water leakage caused by improper sealing, which is not covered under the warranty. To ensure maintenance of original water resistance rating, your watch should be sent to a ProTek authorized service center where pressure testing is part of the service procedure.

Limitation of Duration of Implied Warranties & Limitation of Remedies:

• The duration of any implied warranty on this watch, including but not limited to the implied warranties of merchantability and fitness for a particular purpose, is limited to the duration of the limited warranty stated herein. In no event will the manufacturer be liable for consequential or incidental damages. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to your purchase. This warranty gives you specific legal rights, and you may also have other legal rights which vary from state to state.

REPAIR & SERVICE

To send your watch in for service or a warranty repair, please contact the authorized service center. The repair center will analyze the watch and determine if it is a repair under warranty.

Please include: Contact information (phone, fax & email), return shipping information, proof of purchase (sales receipt) and a brief description of the problem.

Saltzman's Watches 1024 Reservoir Ave, Cranston, RI 02910 888-619-2824 • 401-946-0930

As a precaution against lost shipments, Time Concepts recommends that you insure your shipment and obtain tracking information & delivery confirmation. Time Concepts & Saltzman Watches will not be responsible for shipments lost or damaged in transit.



PROTEKWATCH.COM

Manufactured and distributed by Time Concepts, LLC

6140 W CORPORAL LANE • BOISE, ID 83704 info@timeconcepts.net

TIMECONCEPTS.NET